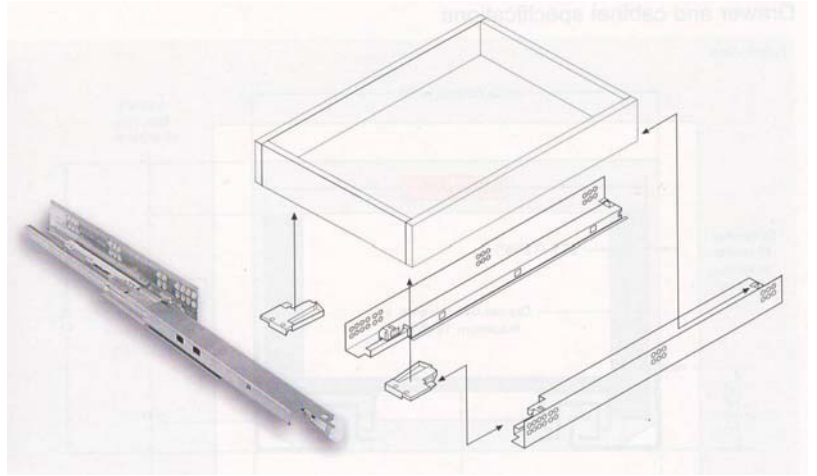
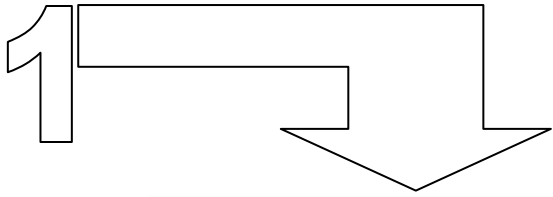
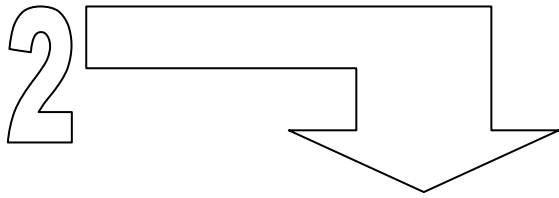


Installation of frameless soft close glides

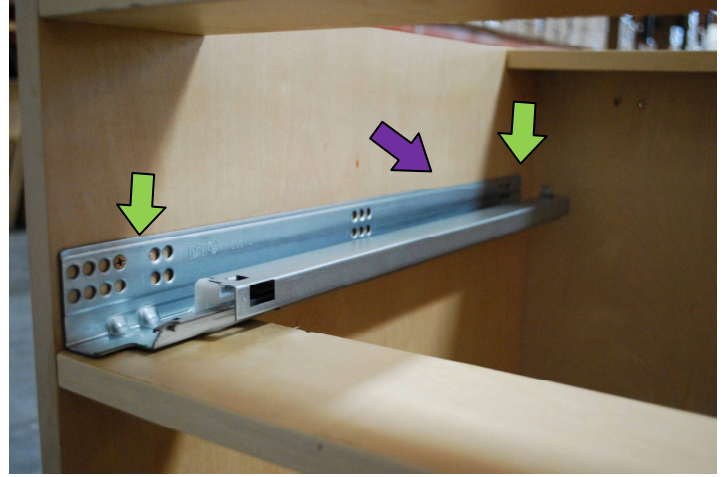
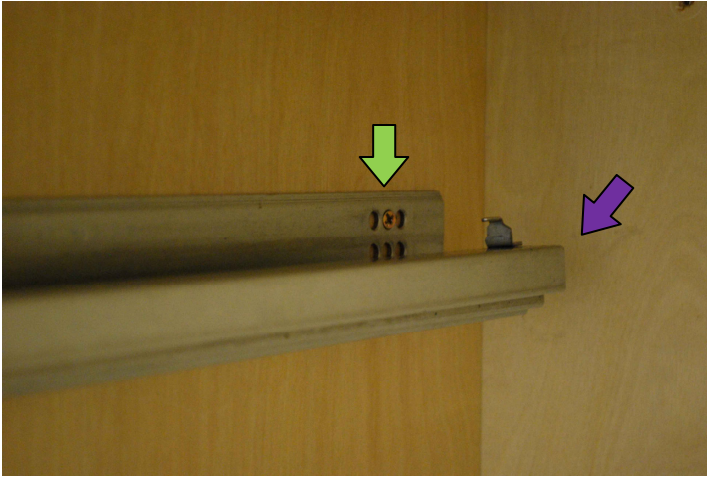
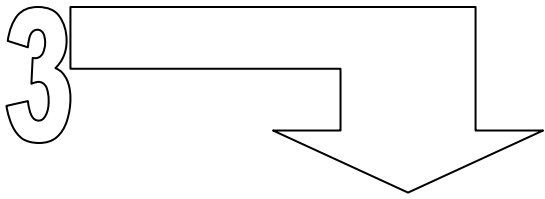


Step One: Assemble your cabinet





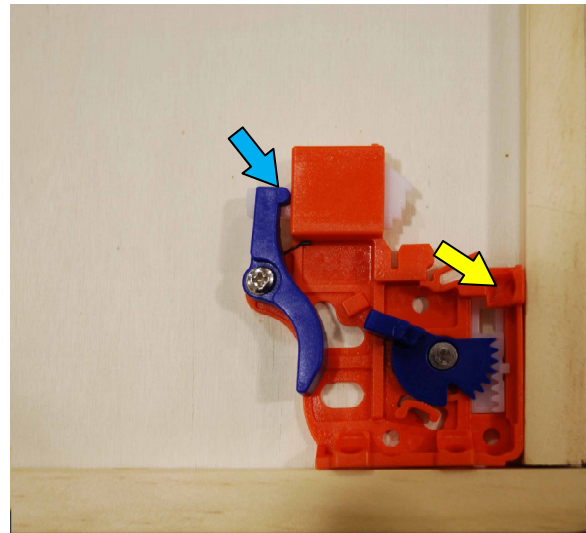
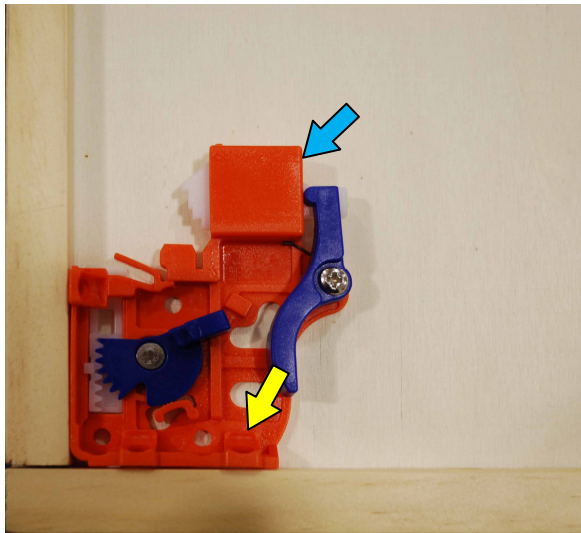
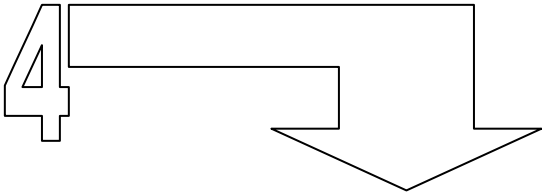
Step Two:

- ➡ Align front of glide with face of cabinet
- ➡ Allow 1/16" – 1/8" for complete drawer closure
- ➡ Screw glide front into place first (this will help to level the glide, use a spirit level to ensure)
- ➡ Screw back of glide into cabinet side





Step Three:

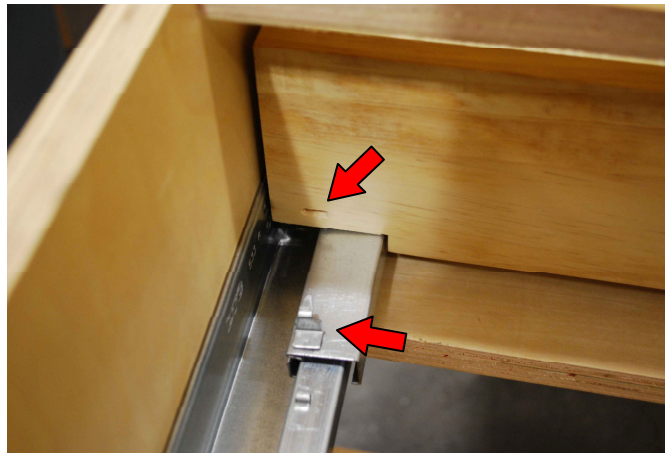
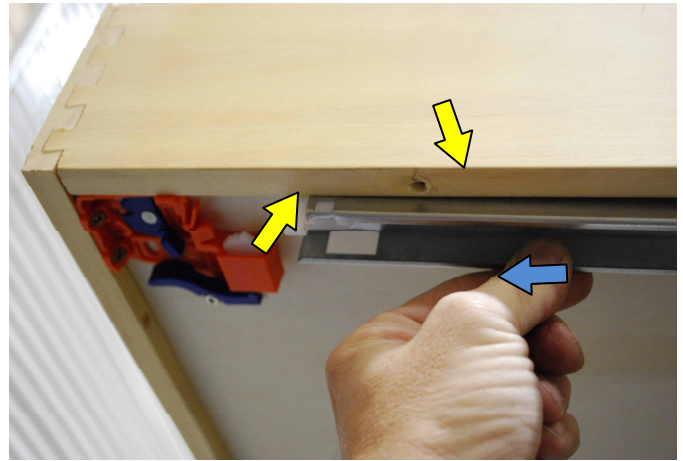
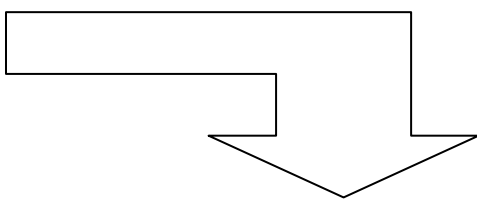
-  Align and screw into place
-  (note there is no gap between the cabinet wall and the glide and the glide does not reach back of cabinet)







Step Four:

-  Place glide clips onto bottom of drawer
-  Screw into place using angled holes (these screw into the sides NOT the drawer box bottom)

5



Step Five:

-  Extend the sliding portion of the glides out of the cabinet
-  Place the drawer onto the extended glides
-  Reach under the drawer and pull the glides into the clips
-  Rear pin seats into notch and holds drawer into place