




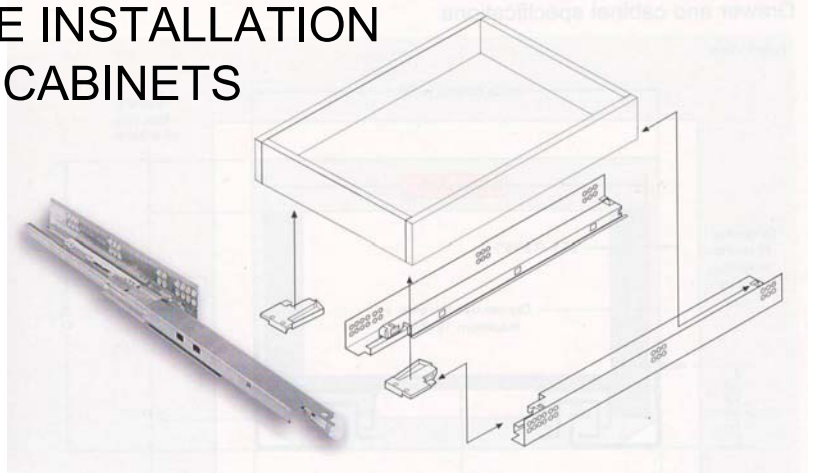

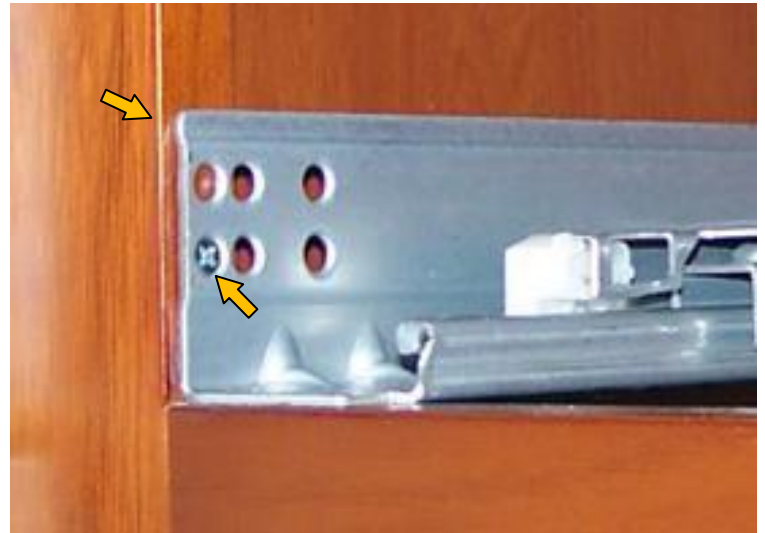

# SOFT CLOSE DRAWER GLIDE INSTALLATION NORTH AMERICAN FRAMED CABINETS

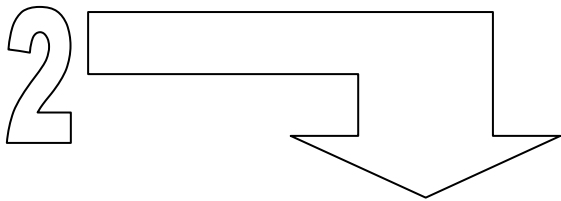



**Step One:** Assemble your cabinet



## Step Two:

-  Slide the 'Rear Mounting Bracket' onto the back of the glide (do not screw in yet!)
-  Align front of glide flush with face of frame
-  Allow 1/16" – 1/8" for complete drawer closure
-  Screw glide front into place first (this will level the glide)



3

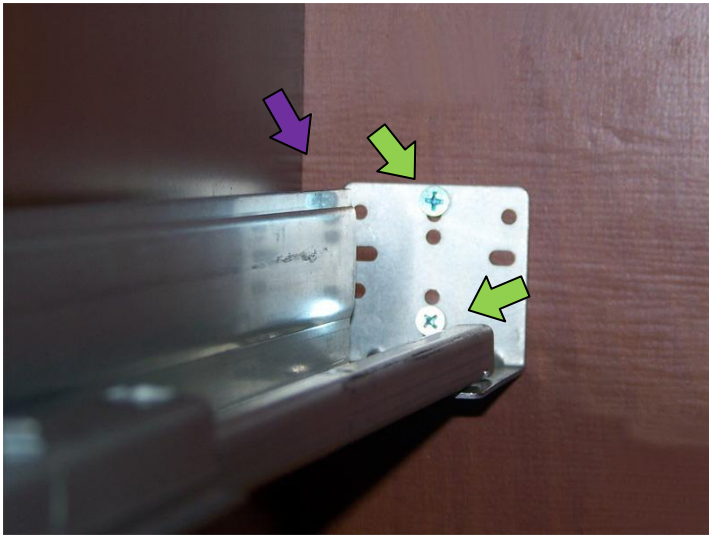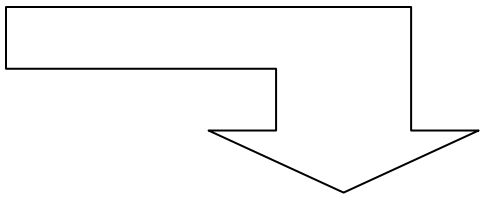

**Step Three:**

- ➡ Align and screw Rear Mounting Bracket into place
- ➡ (note the gap between the cabinet wall and the glide)



4

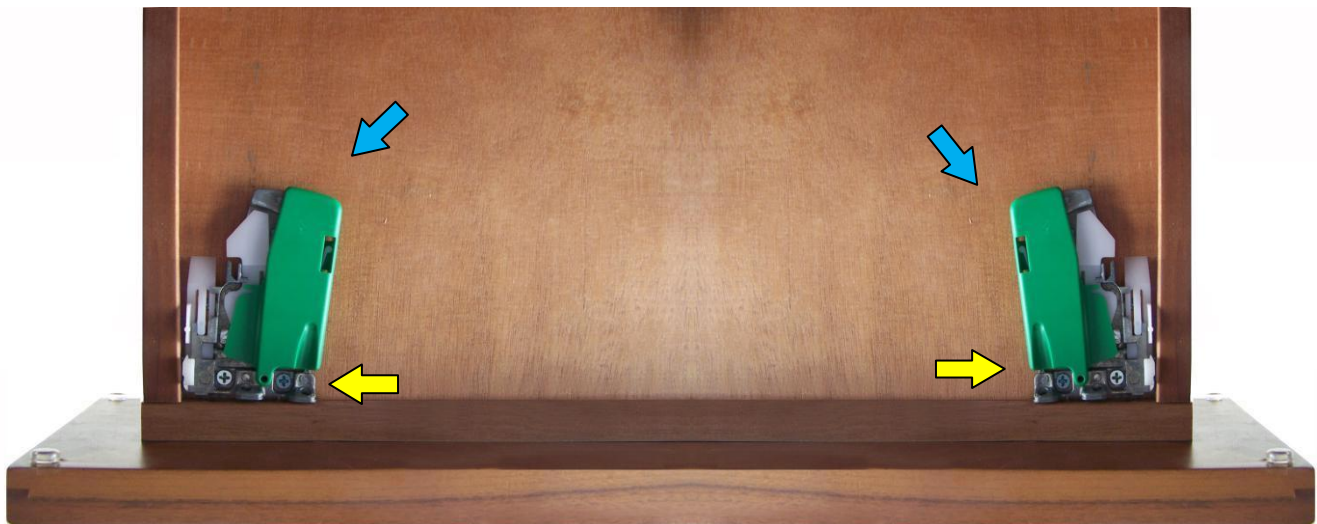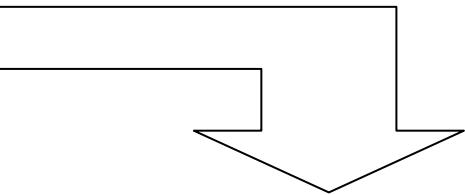





**Step Four:**

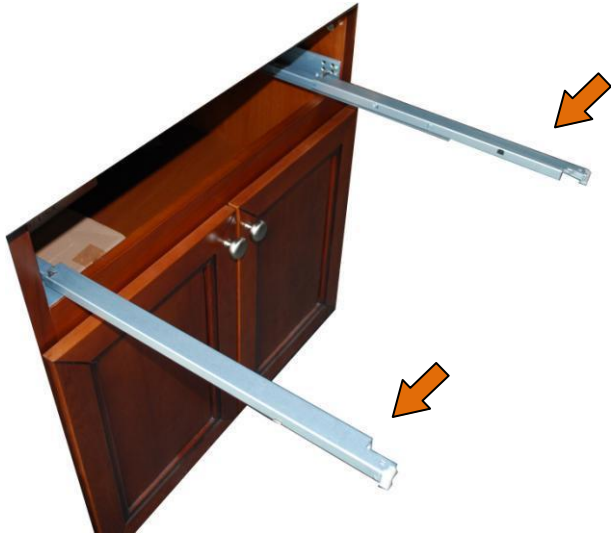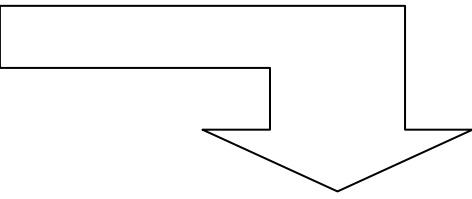- ➡ Place glide clips onto bottom of drawer
- ➡ Screw into place

5



**Step Five:**

-  Extend the sliding portion of the glides out of the cabinet
-  Place the drawer onto the extended glides
-  Reach under the drawer and pull the glides into the clips
-  Rear pin seats into notch and holds drawer into place